



INSTRUCTIONS FOR USE

INSTALLATION

ELECTRICAL CONNECTION

BEFORE USING THE OVEN

**HINTS FOR PROTECTING THE
ENVIRONMENT**

**PRECAUTIONS AND GENERAL
SUGGESTIONS**

OVEN ACCESSORIES

**CLEANING THE OVEN AND ITS
ACCESSORIES**

TROUBLESHOOTING GUIDE


AFTER SALES SERVICE

DECLARATION OF CONFORMITY C E

Installation

Technical information for the installer

- Unpack the oven to make the connections.
- Rest the oven on the polystyrene base to avoid damaging it.
- Do not lift the oven by the door handle, but hold it at the sides.
- Make sure that the appliance has not been damaged during transport.
- The dimensions of the oven and the unit are given in the picture below.
- Units in contact with the oven must be heat resistant (90°C).
- If plastic laminates or the sealing material are not sufficiently heat resistant, bubbles may form, the surface may be deformed or the coating may detach.
- House the oven in the unit cavity, lifting it at the sides and making sure that the supply cable is not trapped.
- To ensure correct ventilation, respect the ventilation openings indicated in the picture (200 mm² minimum).
- Fasten the oven to the unit with the screws (A) as shown.
- The oven can also be fitted under a cooktop.

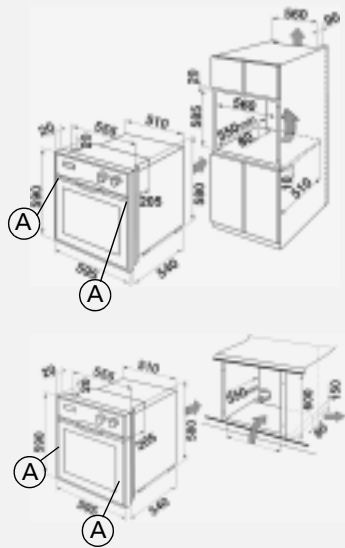

Bauknecht

- There must be a gap of at least 5 mm between the upper edge of the oven and the lower edge of the working surface. This gap must never be closed by strips or unit reinforcing pieces. When the oven is installed, make sure that the sides do not touch the front edges of the unit or the adjacent drawers and door (see below picture).



Electrical connection

- Do not switch on the oven before connection is complete.
- Make sure that the installation and the electrical connection are made by a qualified engineer according to the manufacturer's instructions and the local rules in force.
- The installer is responsible for the correct electrical connection and for observance of the safety rules.
- The appliance must be connected to the main outlet by means of an omnipolar switching device with a contact opening distance of at least 3 mm.
- Grounding appliances is mandatory by law.
- Do not use multiple sockets or extensions.
- After the installation, the electrical parts must be inaccessible.
- Make sure that the voltage stated on the appliance rating plate is the same as the voltage in your home.
- The rating plate is on the front edge of the oven (visible when the door is open).



Before using the oven

- For best use of the oven please read the instructions for use carefully and keep them in a safe place.
- Remove the cardboard protection and the protective plastic film.
- Take the accessories out of the oven and heat it to 200° C for about an hour to remove the smells and fumes of insulating material and protective greases. Keep the window open during this operation.

Hints for protecting the environment

1. Packing

- The packaging material is 100% recyclable and it is marked with the recycle symbol (♻).

2. Electrical appliances


- The electrical appliances are manufactured with recyclable or reusable material. Dispose of them following the local regulations for the disposal of waste. Before disposing of them make them unusable by cutting off the supply cable.





Precautions and general suggestions

- Before any operation, switch off the electricity to the oven.
- Keep children away from the oven when it is in use and when its has just been switched off.
- Any repair or operation on the oven must only be performed by a qualified engineer.
- Make sure that the electrical cables of other appliances used near the oven do not touch hot parts and are not trapped in the oven door.
- Do not lean or sit on the open oven door. Do not hang anything heavy on the handle of the open oven door.
- Use oven gloves to remove pans and accessories, when the oven is hot.
- **Do not cover the bottom of the oven with aluminium foil.**
- Do not leave any flammable material in the oven. If the appliance is switched on by mistake, it could catch fire.
- During the cooking process water evaporates as steam from the food. All ovens require this steam, and other fumes, to be vented from the oven cavity. For reasons of safety and appearance, it was determined that the bottom of the door is the optimum position. Consequently vapour may be seen coming from this area on occasion (see picture). This is a normal occurrence and the bottom trim can be cleaned.
- Do not rest heavy weights on the door because these could damage the oven cavity and the hinges.
Maximum weight: 7 Kg.

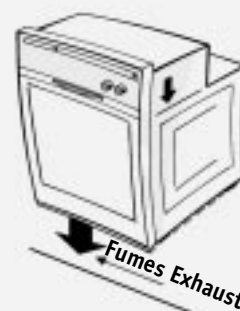


Oven accessories

- **Accessories supplied depend on the model (refer to the Product Description Sheet supplied separately).**

Bar rack

The bar rack can be used in the same way as a flat rack.

The number of shelf positions can be doubled, depending on whether the rack is inserted in the (A) or (B) position.

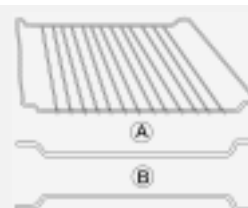

Multi-purpose drip tray

This tray can also be used as a baking tray, and has a sloping edge for this purpose.

Use as a baking tray for cream puff, meringues, madeleines, puff pastry, etc.

When placed under a rack, it acts as a drip tray to collect dripping juices and fat from grilling dishes.



Turnspit


The turnspit comes supplied with a stand for the spit.

To use the turnspit:

- Fit the spit stand in position in the oven.
- Slide one of the forks on to the spit, followed by the food to be spit-roasted, then the second fork.
- Centre the food and secure in position by screw-tightening the two forks.

- Place the spit on the stand.
- Brush the food with oil or softened butter.
- Insert the tip of the spit in the turning square at the back of the oven.
- Set the selector to the GRILL + TURNSPIT position.


Before closing the door, remove the heat-insulated handle from the spit by unscrewing.

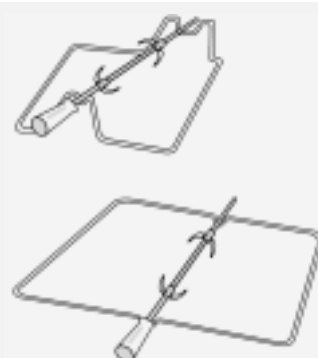

Pan Set Kit

This Set is obtained by putting the grid (A) on the Multi-purpose drip tray (B). Use tong (C) for handling.

Use this Kit with the Grill function.

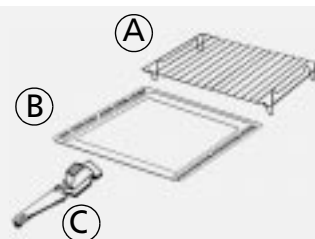



Cleaning the oven and its accessories

- After each use leave the oven to cool and clean it to avoid the encrustations being repeatedly heated.
- If the dirt is tough, use a specific oven cleaning product following the instructions on the packaging.
- Clean the outside with a sponge dampened with lukewarm water.
- **Do not use abrasives or metal pads.**
- Clean the oven door glass with a liquid detergent.
- Wash the accessories in the dishwasher or by hand using an oven cleaning product.
- If cooking lasts for a long time, or when cooking simultaneously on several levels, food containing a large amount of water (pizza, stuffed vegetables, etc.) may create condensation on the inside of the door and on the gasket; when the oven has cooled, dry with a cloth or a sponge.




Additional information for appliances which have an aluminium front:

The material has a sensitive surface. In order to avoid scratches, only use a soft sponge and liquid cleaner to clean the front of the appliance.

Removing the oven door

To remove the oven door, guide the lever (A) into the hinge notch (B): close the door to its stop position and pull out towards you.

Refit in the reverse order.

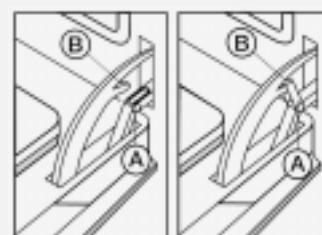


Changing the oven light bulb

Disconnect the oven from electrical supply.

To remove and replace the bulb, remove the cover (**H**). Proceed as shown in the diagram opposite.

Use only E14 -25W - 300 °C bulbs.

Remember to replace the seal (**J**).

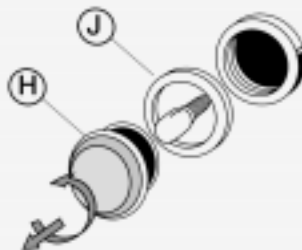

Self-cleaning system

This oven burns off splashes and deposits at high temperature.

The smoke produced is cleaned by being passed through a catalyser.

The self-cleaning system works more efficiently if operated before the oven becomes too soiled, with a low energy consumption.

However, it is not necessary to operate the self-cleaning function each time the oven is used, but only if the oven is splashed. For safety reasons, the self-cleaning function will only operate following **automatic** locking of the oven door.

Once the internal temperature of the oven exceeds the maximum cooking temperature, the door can no longer be opened.



Cleaning the oven and its accessories

Notes



The self-cleaning function can be operated at any time using the programmer, even overnight (to take advantage of lower tariffs). Before operating, take the following essential precautions:


- **remove all accessories from the oven**, including the oven fittings (racks, multifunction drip trays, etc.).
- **remove larger deposits**, since these can ignite or produce a large amount of smoke.


When the self-cleaning operation is complete and the door can be re-opened, there may be white deposits on the inside of the oven: allow the oven to cool and remove any residues with a damp sponge.

The cooling fan will continue to operate after the oven has switched off. This is normal, and it will switch off automatically once the oven has cooled down to normal temperature.

USING THE SELF-CLEANING FUNCTION

- Turn the mode selector to the "economic self-cleaning" position  (if provided) or to the "normal self cleaning" position .

In the position  a time of 1h. 30 min. is selected automatically and cannot be modified. A delayed self-cleaning cycle can be programmed; please refer to the instructions in the separate Programmer Sheet, section: Selecting the End of Cooking time.

In ovens with electronic control:  a time of 1h. 30 min. is selected automatically.

To change this time or select delayed self-cleaning, please refer to the separate Programmer sheet, section: Selecting the Cooking Time or Selecting the end of Cooking Time.

In ovens without electronic control, the self-cleaning time must be programmed. Please refer to the separate Product Description Sheet.

The self-cleaning function can be extended to 120 minutes or more if the oven is particularly heavily soiled.

The pilot light indicates that the oven door is locked and remains on after the end of selected self-cleaning time. The door cannot be re-opened until the oven has cooled down to a normal temperature (maximum temperature of the cooking thermostat).

Do not attempt to unlock the oven door by force.

If the pilot light is on, wait until it switches off.

Troubleshooting guide

The oven does not work

- Switch on the appliance again to see whether the problem has disappeared.
- Check that there is power to the appliance.
- Check that the oven selector switch is not on the "O" position.
- Check that the temperature and function have been selected.

Excessive smoke during operation

- Select a temperature lower than the recommended temperature given in the cooking chart.
- Do not use the multi-purpose drip tray as a roasting tin.
- Clean the oven.

Steam

- When cooking food which contains a large amount of liquid (e.g. stuffed tomatoes, courgettes), the oven should be pre-heated to the cooking temperature to prevent condensation forming on the glass panels of the oven door.

The cooling fan continues to operate after the oven has switched off

- The Cooling Fan is an active safety device which may continue to operate after the oven has been switched off. This is normal and ensures proper cooling down of the oven.

The cooling fan fails to operate

Call After Sales Service.

The oven door fails to open

- While the self-cleaning function is in operation, the door remains locked and the pilot light remains on. The door cannot be re-opened until the oven has cooled down to below a normal operating temperature (maximum temperature of the cooking thermostat).

Ovens with electronic display:

- If the electronic display presents the message **"STOP"**, press the button 2 to reset the oven and then set the clock (see the Programmer Description Sheet supplied separately).
- If the electronic display shows the message **"Fxx"**, contact the After-Sales Service, quoting the error code displayed.

If the appliance still fails to function properly, please call After Sales Service.

After sales service

• Before contacting After sales service:

1. See whether you can solve the problem yourself (see "Trouble-shooting guide").
2. Switch the appliance off and on again to see whether the problem has disappeared.

If after these checks the oven is not working correctly, contact the nearest After-Sales Service.

Always give:

- the type of fault

- the type and exact number of the appliance
- the Service number (this is the number after the word SERVICE on the serial number plate) on the inner left edge of the cavity. The After-Sales Service number is also given on the guarantee leaflet.
- your complete address including Post Code and telephone number.

If any repairs are required, please contact **an authorised After sales service** as indicated in the warranty.

In the unlikely event that an operation or repair is carried out by an **unauthorised technician**, always request a certification of the job carried out and insist on the use of **original spare parts**.

Failure to comply with these instructions may compromise the safety and quality of the product.



Declaration of conformity

- These electrical appliances are intended to come into contact with food products and conform with European Directive 89/109/EEC.
- They have been designed for use only as cooking appliances. Any other use (e.g. room heating) is to be considered incorrect and consequently dangerous.
- They have been designed, manufactured and put on the market in conformity with:
 - the safety requirements of "Low Voltage" Directive 73/23/EEC;
 - the protection requirements of EMC Directive 89/336/EEC;
 - the requirements of Directive 93/68/EEC.